

Standard Operation - Studio Open

- 4.1 Press and hold the On/Off button until a short beep confirms the start up sequence has begun. Continuing beeps confirm the ignition process is under way. The appliance will light in the High flame position.
- 4.2 Press UP button to increase the flame height. Press the DOWN button to decrease the flame height. At the lowest point it goes to 'standby mode', (only pilot lit). Press the ON/OFF button again to turn the appliance off.

Dual Burners - Riva2 800/1050

- 4.3 To operate the dual burner controls, press the **On/Off** button and **DOWN** button simultaneously to **turn the front burner off**. Press the **On/Off** button and **UP** button simultaneously to turn the **front burner on**.

The flame height can be adjusted in either the single or dual burner modes by the using the UP and DOWN buttons.

Press and hold the On/Off button to turn the appliance off.



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.



Fire Your Imagination

SEQUENTIAL REMOTE CONTROL SYSTEM



QUICK START GUIDE TO OPERATION

Gazco Limited, Osprey Road, Sowton Industrial Estate,
Exeter, Devon, England EX2 7JG
Tel: (01392) 261950 Fax: (01392) 261951
E-mail: technicalservices@gazco.com
A member of the Stovax Group
E & O E

PLEASE NOTE

This is a quick guide to using your Gazco fire. A more detailed explanation is found in the main Instructions for Use, Installation and Servicing.


1. Operating the Appliance

This manual covers several methods of operation:

Studio Open	Standard Remote Control & Wall Mounted Touchpad
Glass Fronted Studio, Eclipse 100 & Riva2 500/530/670/750HL	Thermostatic & Timer Remote Control
Riva2 800/1050	Thermostatic & Timer Remote Control and Wall Mounted Touchpad

2. Standard Remote Control Operation

Studio Open models only

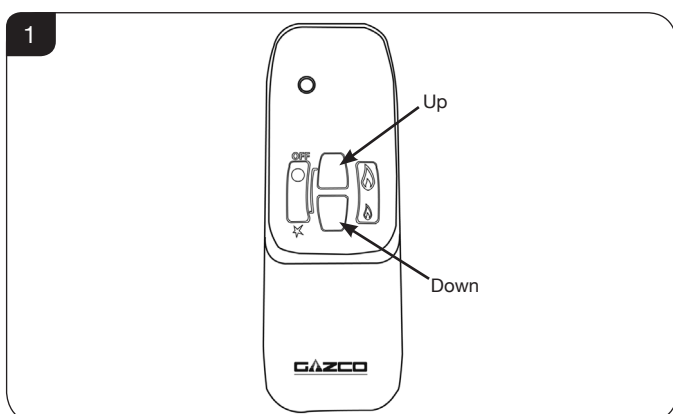

2.1 Turning the appliance On

Press the LOWER section of the LEFT hand button and the UP button simultaneously. An audible beep will be heard (the lighting sequence can take up to 30 seconds).

The pilot will light along with the main burner on high setting.

2.2 Adjusting the Flame Height

The flame height of the main burner can be:

Increased by pressing the LOWER section of the LEFT hand button and the UP button simultaneously.

Decreased by pressing the DOWN button to decrease to minimum. At the lowest point the appliance goes into standby mode where only the pilot is lit.

2.3 Turning the appliance Off

Press the OFF button to extinguish the appliance.

Low Battery

- 2.4 The handset has a low battery indicator on the display when its batteries need replacement. Battery replacement is recommended after 1 year.

Dual Burners - Riva2 800/1050 and Eclipse models only

- 3.15 Upon ignition, the appliance will light in the position it was last set to; for example, if it was last set to rear burner only, it will relight in this position. With the handset it is also possible to turn off the front burner and use the appliance with just the rear burner operating.

Press **SET** and the **DOWN** button simultaneously to switch the front burner **OFF**. Press **SET** and the **UP** button simultaneously to switch the front burner **ON**.

This operation is blocked when in Timer OFF mode and the night time set back temperature is set to "--". It is not possible to independently control the flame height between the rear and front burners. It is however possible to control the flame height of the rear burner when the front burner is turned off allowing a reduced minimum input position.



4. Touchpad Control

Wall Mounted Touchpads are only available on the following models:

1. Studio Open Range (see Diagram 4).

2. Riva2 800 & 1050 Range (see Diagram 5).

Note: There is no wall mounted touchpad on the Glass Fronted Studio Range Riva2 500, 530, 670, 750 or Eclipse models.

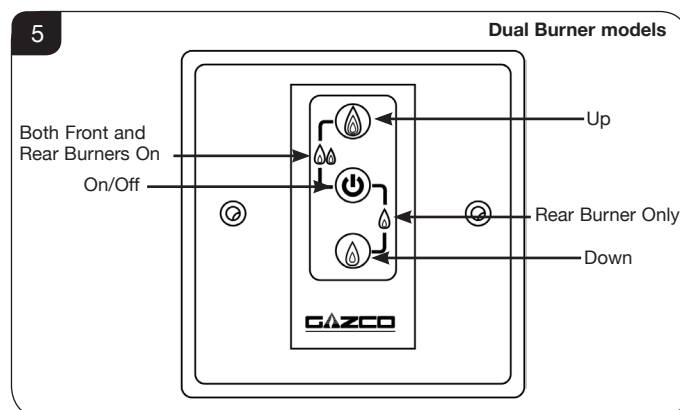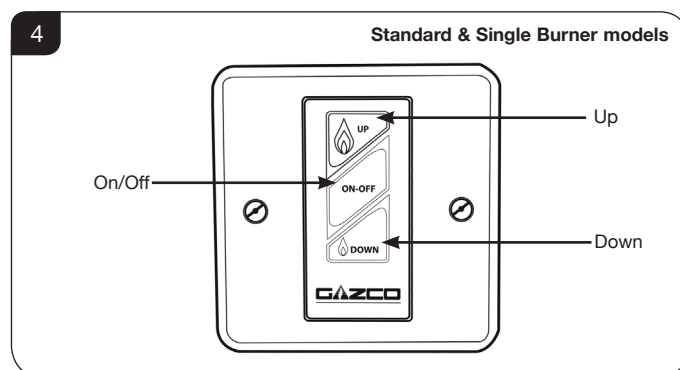



NOTE: If a temperature is set that is beneath the current room temperature, the appliance automatically switches to PILOT (Stand by).

To turn the **Night** temperature control off then decrease the temperature until [--] is displayed.

Timer Mode (Automatic)

- 3.10 There are two programmable settings that can be set over a 24 hour period, P1 and P2. These are normally used to provide an early morning and evening setting for each working week:

P1 + ● = Start Timed Setting 1
 P1 + ➤ = End of Timed Setting 1
 P2 + ● = Start Timed Setting 2
 P2 + ➤ = End of Timed Setting 2

3.11 P1 - Program 1 for a Timed Setting

Press the SET button until the TIMER mode is displayed.

Hold the SET button. The display flashes the current time for P1. **While the time displayed is flashing you can alter the hours and minutes set.**

To set the time the appliance first lights, change P1 ●
 Press the **UP** button to alter the **HOUR**.

Press the **DOWN** button to alter the **MINUTES** in 10 minute increments.

Press **SET** again to move to the end setting for P1 ➤ This is the time the appliance first shuts down:

Press the **UP** button to alter the **hour**.

Press the **DOWN** button to alter the **MINUTES**.

3.12 P2 - Program 2 for a Timed Setting

Use the same steps outlined in 3.11 to change the setting for P2.

If P1 is already set and only P2 needs to change:

Press the **SET** button until **TIMER** mode is displayed.

Hold the **SET** button until the display flashes the **current time** for P1 ●.

Press the **SET** button once again to scroll past the settings for P1 ● and P1.

With the time still flashing:

Press the **UP** button to alter the **HOUR**.

Press the **DOWN** button to alter the **MINUTES**.

Once all four times are set press the **OFF** button.

3.13 To view existing settings:

Select **TIMER MODE**.

Press and briefly hold the **SET** button the start time for P1 will be displayed.

Repeat the above step for the start and end of each program.


Low Battery

- 3.14 The handset has a low battery indicator on the display when its batteries need replacement.
 Battery replacement is recommended after 1 year.

3. Thermostatic and Timer Remote Control

Glass Fronted Studio, Riva2 and Eclipse 100 models

2

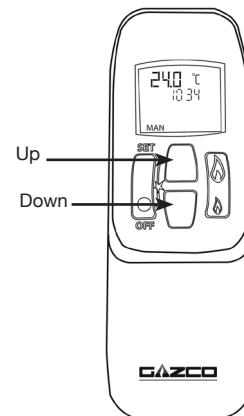

3.1 Turning the appliance On

The remote can control the gas appliance from pilot ignition through to shut down.

To turn the appliance on press the **OFF** button and the **UP** button simultaneously. Several short signals can be heard. **The pilot and main burner ignite and the remote is now in Manual Mode:**



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.

- 3.2 There are 3 different modes available for controlling and operating the appliance:

1. Manual Mode
2. Temp Mode (Automatic)
3. Timer Mode (Automatic)

3.3 In **MANUAL MODE** you can:

Turn on the burners using the **UP** button.

Regulate the flame from high to low and back.

Switch between dual and single burners.

Turn off both burners leaving just the pilot burning .

In **TEMP MODE (Automatic)** you can:

Set the room temperature so the thermostat in the remote automatically maintains that temperature.

In **TIMER MODE (Automatic)** the appliance:

Turns on and off according to the set time periods.

Automatically regulates the room temperature during the set periods.




NOTE: When operating the appliance in Temp or Timer mode, the pilot remains lit and the appliance then automatically switches on at programmed times to bring the room to the set temperature whether or not you are in the room.

NEVER LEAVE ANY COMBUSTIBLE MATERIALS WITHIN 1 METRE OF THE FRONT OF THE APPLIANCE.

Advanced Controls

- 3.4 The LCD screen displays the following information, see Diagram 3.
- 1) °C/24 hour or °F/12 Hour Clock
 - 2) Signal strength (between handset and appliance)
 - 3) Battery Status
 - 4) Time Setting
 - 5) Dual/Single Burner Select
 - 6) Selected mode - Manual Flame / Fixed Temp (Auto) / Program - when appliance is switched on
 - 7) Program Timer Setting
 - 8) ON/OFF Temperatures setting
 - 9) Temperature Setting

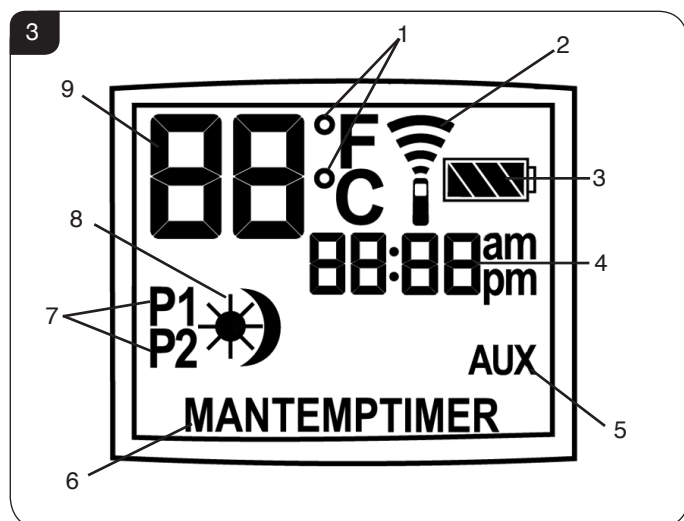

Switching Between Modes

- 3.5 Press the SET button to change to Temperature Mode. Press again to change to Timer Mode. Keep pressing to run through all operating modes.

These are:
MAN
DAY TEMP
NIGHT TEMP
TIMER
and back to MAN

NOTE: MAN mode can also be reached by pressing either the UP or DOWN button.

Setting the Time

- 3.6 The Time display will flash after either:
- a) Installing the battery
 - b) Simultaneously pressing the UP and DOWN buttons.

Press the UP button to set the **HOUR**.
Press the DOWN button to set the **MINUTE**.
Press OFF or wait for the remote to return to **MAN mode**.

Setting the °C/24 Hour or °F/12 Hour clock

- 3.7 Press OFF and the down arrow until the display changes from °C/24 hour clock to °F/12 hour clock and vice versa.

Manual Mode

- 3.8 Press the OFF button and the UP button simultaneously. Several clicks and audible beeps will sound as the appliance begins the ignition process, (up to 30 seconds). The burner will light in the High position.

Turning the appliance Off:

Press the OFF button to turn the appliance off.

FOR SAFETY, WAIT 30 SECONDS BEFORE LIGHTING THE APPLIANCE AGAIN.

Increasing the Flame Height:

Press and hold the UP button to increase to maximum.

Decreasing the Flame Height:

Press and hold the DOWN button to decrease to minimum. At the lowest point the appliance goes to 'Standby Mode' (Only Pilot lit).

Designated Low and High Flame Positions:

Press the DOWN button twice to put the appliance into the designated low position. 'LO' will be displayed on the handset.

NOTE: The flame will go to the designated high position before going to the low setting.

Press the UP button twice to put the appliance into the designated High position. 'HI' will be displayed on the handset.



NOTE: While pressing a button a symbol indicating transmission appears on the display. The receiver confirms transmission with a sound signal.

Temp Mode (Automatic)

- 3.9 The display shows the current **room** temperature.

To increase or decrease the appliance output:

Press the **SET** button to select either the **DAY TEMP** or the **NIGHT TEMP** mode by briefly pressing the SET button.

Hold the **SET** button until the **TEMP** display flashes and then let go.

Set the desired temperature with the UP and DOWN arrows. (Minimum temperature 5C, maximum 40C or 40F to 99F when Fahrenheit is the preferred option)

Press the OFF button to stop the display flashing or wait to return to TEMP mode.