



JETMASTER GAS CONVECTOR INSTALLATION INSTRUCTIONS A TYPICAL IN-BUILT INTO TIMBER FRAMING

ALL INSTRUCTIONS TO COMPLY WITH GAS INSTALLATION AS/NZS 5601.1:2010

Due to continued product improvement, The Fireplace Ltd reserves the right to change product specifications without prior notification

JETMASTER IGC BOX DIMENSIONS

Table 1

Model	A	A1	A2	B	C	D	E	F	G	Y
700	700	800	750	341	650	290	200/250	630	265	235
850	850	950	900	341	650	290	250/300	630	265	235
1050	1050	1150	1100	341	570	290	250/300	550	265	235
1200	1200	1300	1250	341	570	290	250/300	550	265	235
1500	1500	1600	1550	341	570	290	250/300	550	265	235

Dimensions in mm

Fig. 1


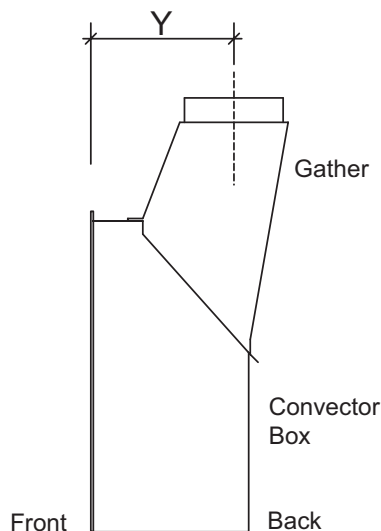


Fig. 2



Drawings Not To Scale

IMPORTANT: Read all instructions carefully before starting installation. Failure to follow these instructions may result in a fire hazard and will void the warranty.
This appliance must be serviced every 12 months by a registered gas fitter.

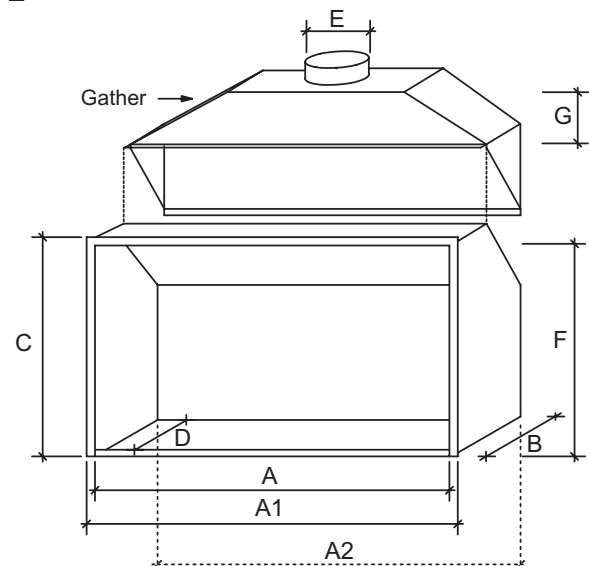